# This Page Is Inserted by IFW Operations and is not a part of the Official Record

## **BEST AVAILABLE IMAGES**


Defective images within this document are accurate representations of the original documents submitted by the applicant.


Defects in the images may include (but are not limited to):

- BLACK BORDERS
- TEXT CUT OFF AT TOP, BOTTOM OR SIDES
- FADED TEXT
- ILLEGIBLE TEXT
- SKEWED/SLANTED IMAGES
- COLORED PHOTOS
- BLACK OR VERY BLACK AND WHITE DARK PHOTOS
- GRAY SCALE DOCUMENTS

### IMAGES ARE BEST AVAILABLE COPY.

As rescanning documents will not correct images, please do not report the images to the Image Problem Mailbox.

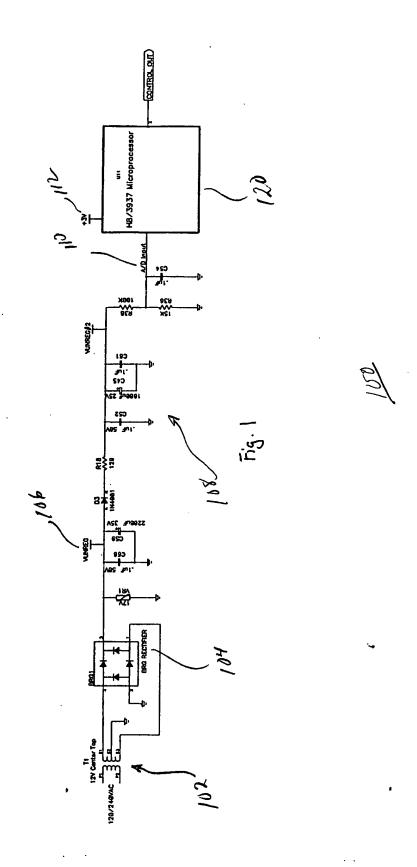

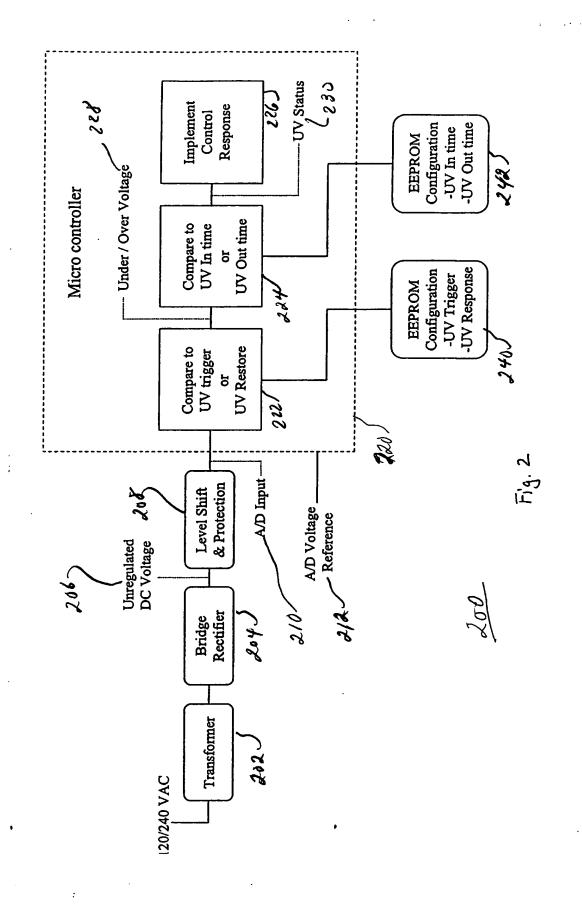

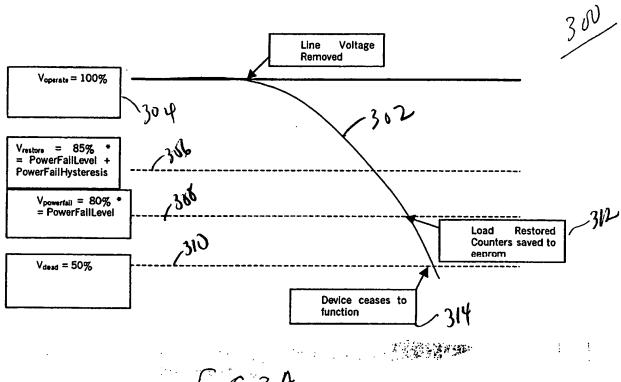


FIG.3A

Rythin Johnson

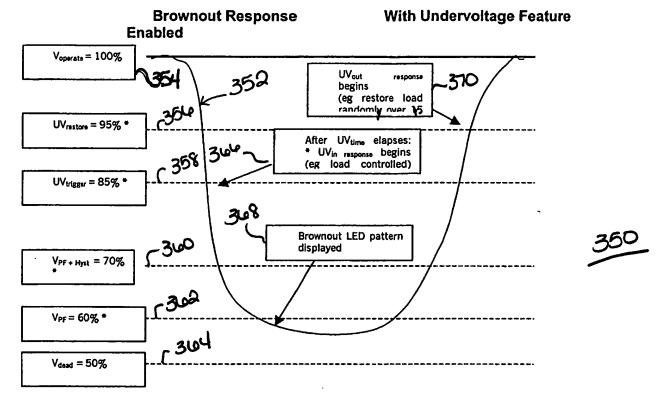


Fig. 38

#### Powerfail Response Enabled

#### With Undervoltage Feature




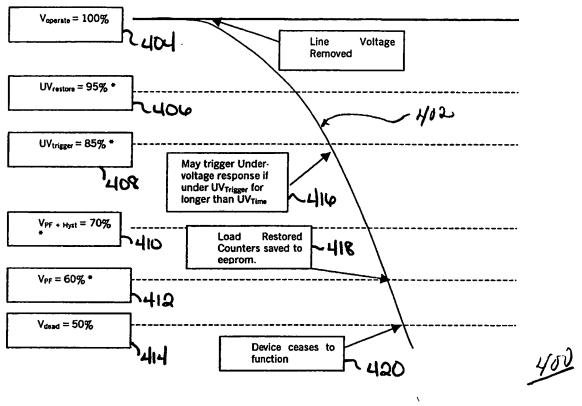


Fig. 4

# Power Restore Response With Undervoltage Feature Enabled

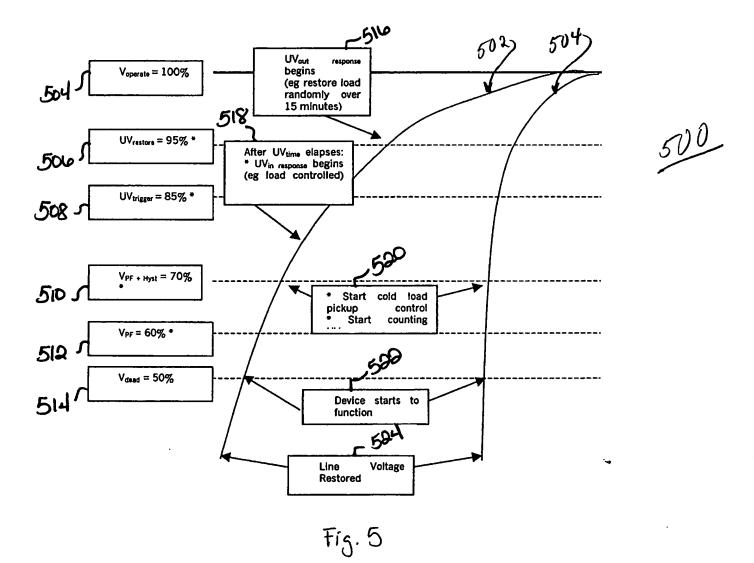

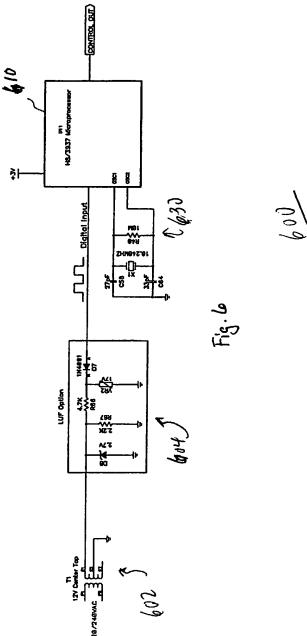

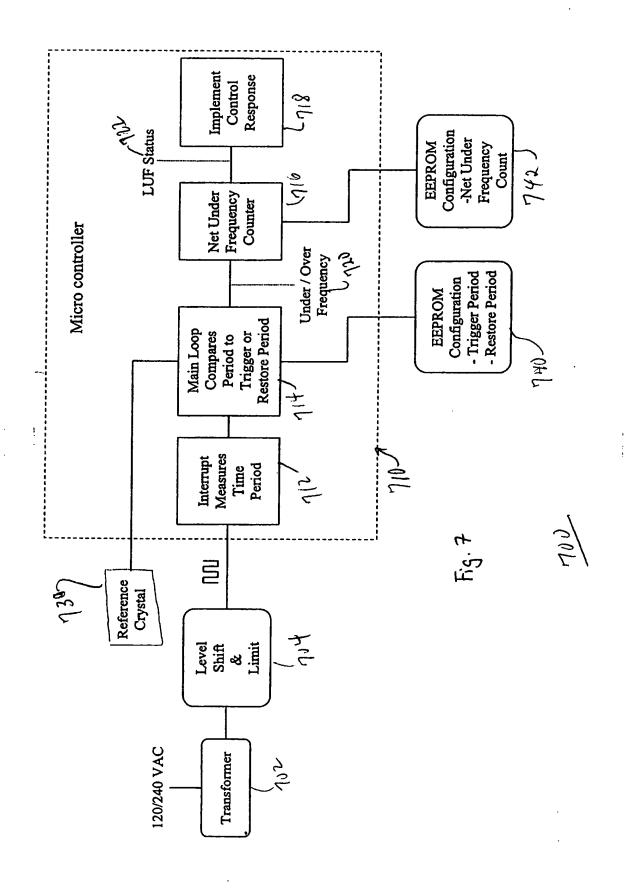

#### 1.1.4.1. Normal Operation (LUFStatus = 0)

For each sample, the length of the cycle is compared to the UFT\_Trigger. If the cycle length is greater or equal to the trigger, than NUFCount is incremented. If the cycle length is less than the trigger than NUFCount is decremented.

If NUFCount reaches NUFTrigger, then a under frequency condition has been detected and then the LUFInResponse is implemented and the LUFStatus is set.

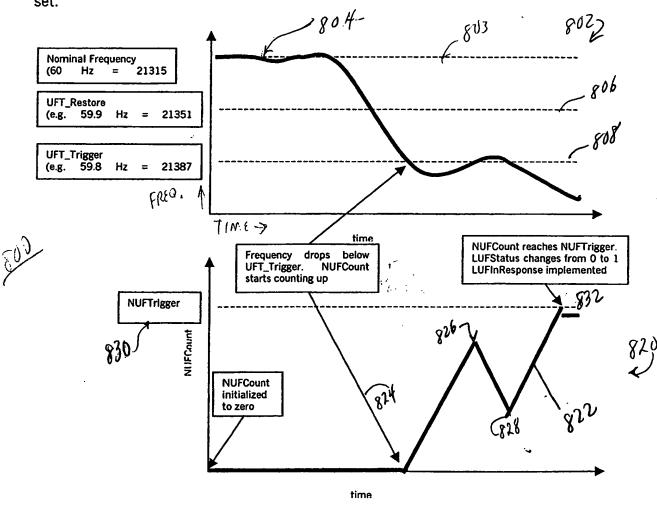


Fig. 8

#### 1.1.4.2. Underfrequency Operation (LUFStatus = 1)

Once LUFStatus is set, then each cycle is compared to UFT\_Restore. If the cycle length is greater or equal to the trigger, than NUFCount is incremented. If the cycle length is less than the trigger than NUFCount is decremented.

If NUFCount reaches zero, then the under frequency condition has ceased, and then the LUFOutResponse is implemented and the LUFStatus cleared.

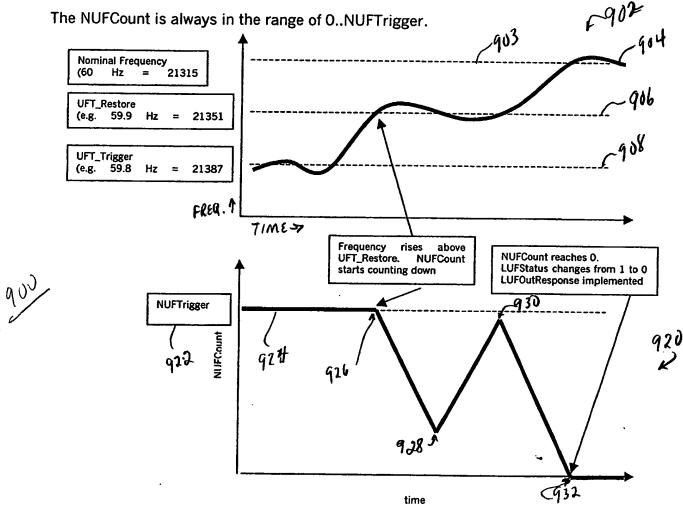


Fig. 9

#### 1.1.5. OPERATION (ALGORITHM)

For each power line cycle:

If LUFStatus is Normal

If MLP >= UFT\_Trigger

Increment NUFCount

Else

**Decrement NUFCount** 

If NUFCount>=NUFTrigger AND NUFTrigger is non-zero

Set LUFStatus to Under-Frequency

Increment LUFCount

Perform LUFInResponse (typically control all loads)

Else LUFStatus is Under-Frequency

If MLP >= UFT\_Restore

If (NUFCount<NUFTrigger)</pre>

**Increment NUFCount** 

Else

**Decrement NUFCount** 

If NUFCount is Zero or NUFTrigger is zero

Set LUFStatus to Normal

Perform LUFOutResponse (typically restore all loads)